

BR

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
BALANCE RAIL

USER MANUAL




SWAROVSKI OPTIK KG
 6067 Absam, Austria
 Tel. 00800/32425056
 customerservice@swarovskioptik.com
 WWW.SWAROVSKIOPTIK.COM

BA-702-28, 03/2017

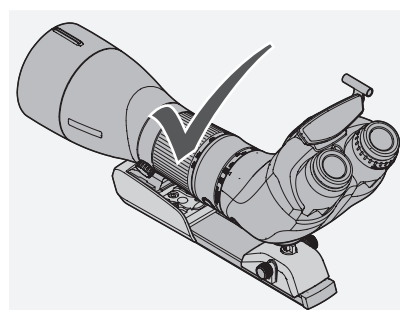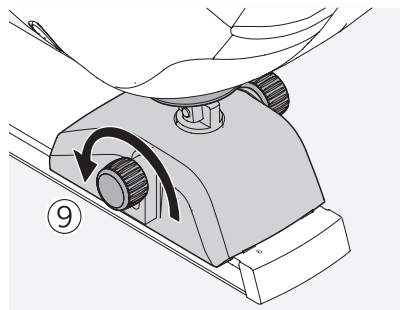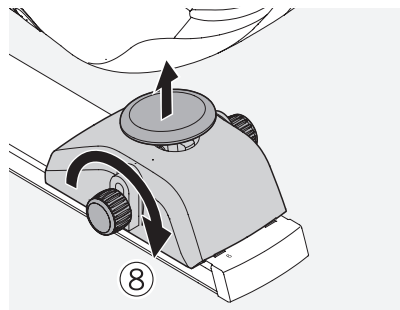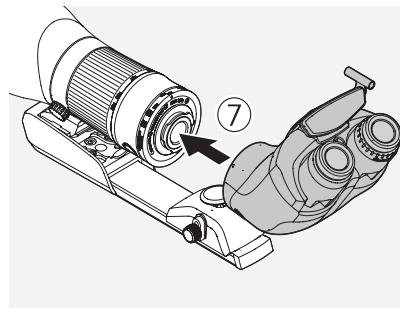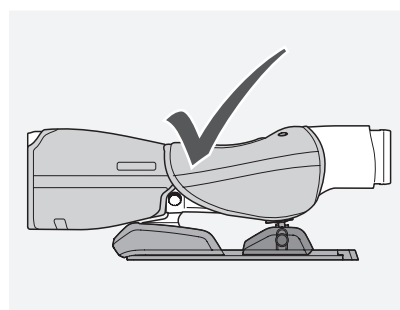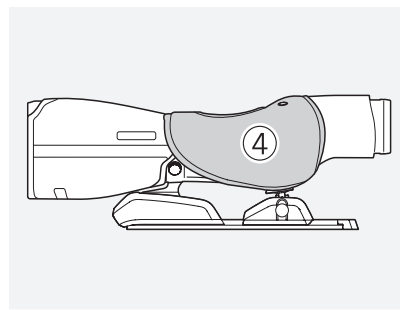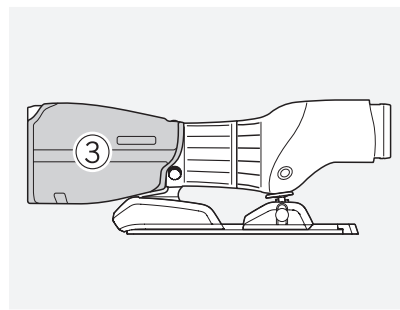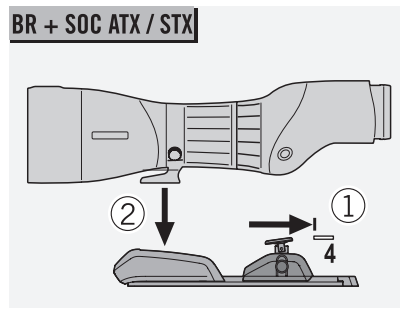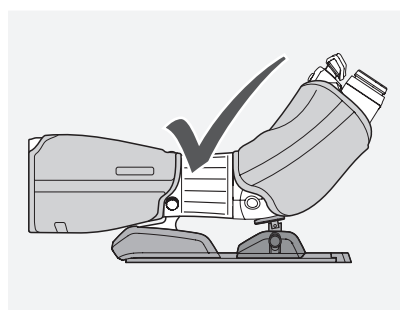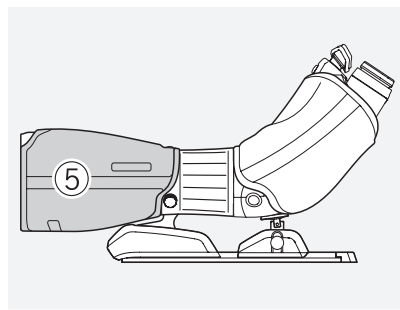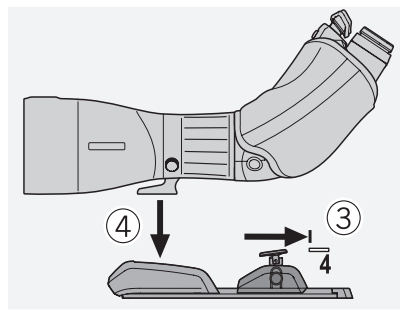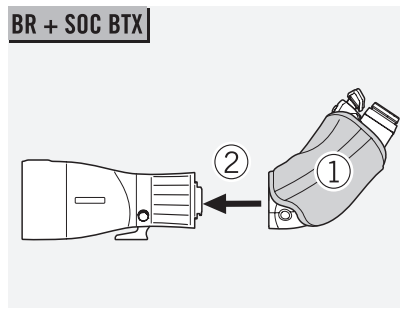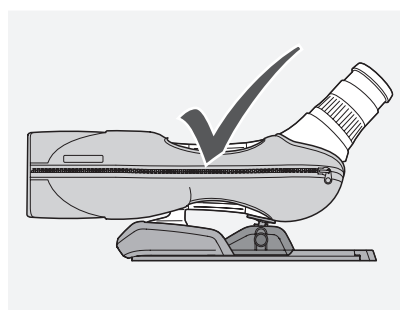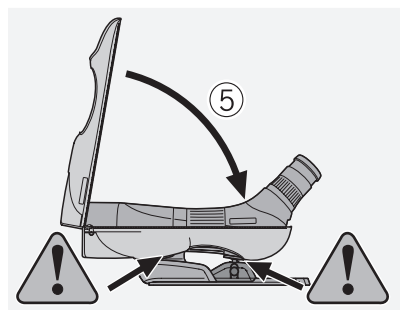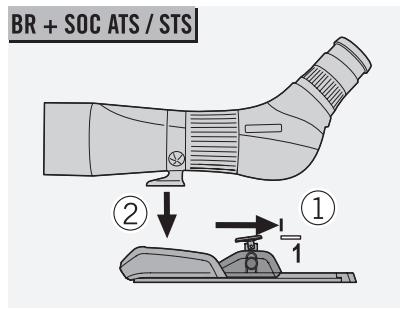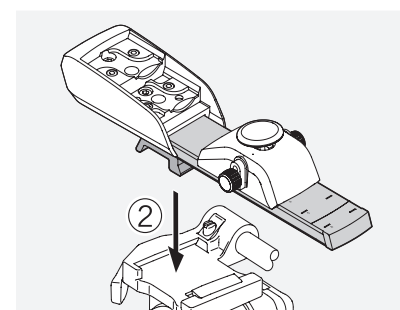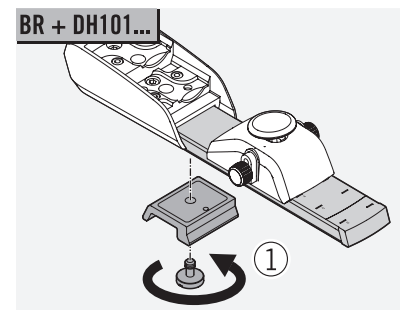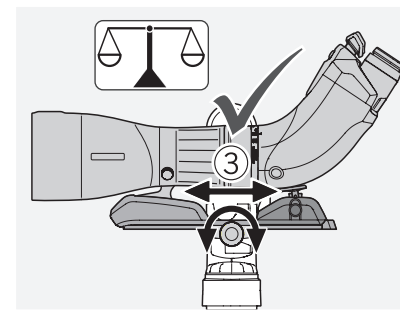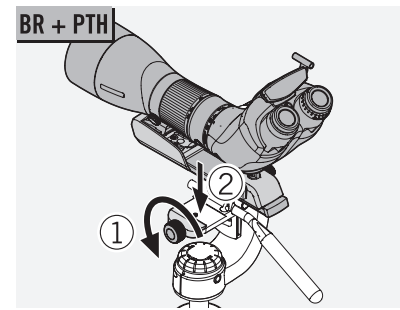





ATX / STX 85 / 95
BTX 85 / 95
ATS / STS 65 / 80

 ATX / STX 65
BTX 65

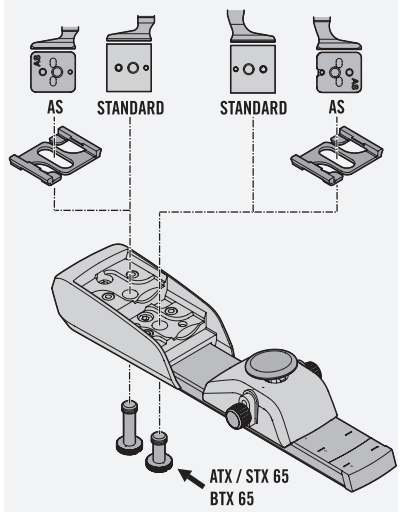


ATX / STX 85 / 95
BTX 85 / 95
ATS / STS 65 / 80

 
 
 
 
ATX / STX 65
BTX 65

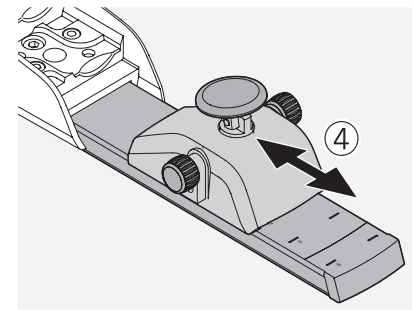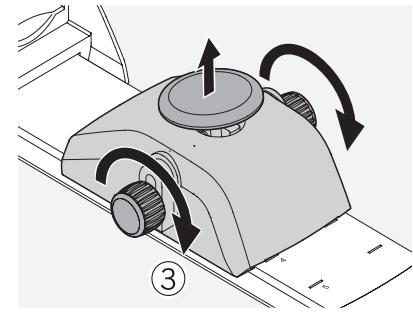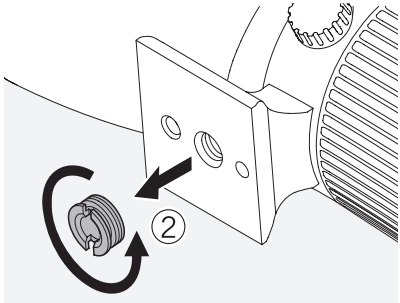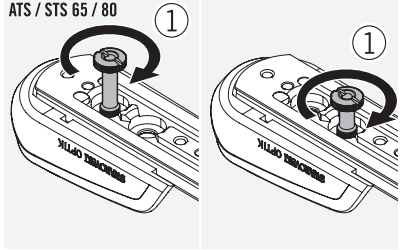








①	ATS 65 / 80 + SOC
②	STS 65 / 80 + SOC
③	STS 65 / 80
④	ATS 65 / 80 BTX ATX / STX / BTX + SOC
⑤	ATX / STX
⑥	ATX / STX / BTX + ME 1.7x BTX + ME 1.7x + SOC

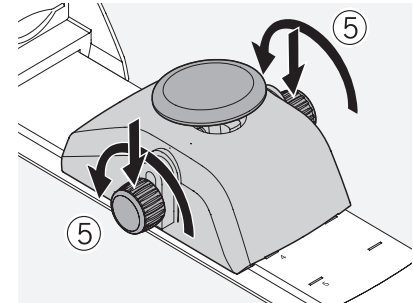 

AS

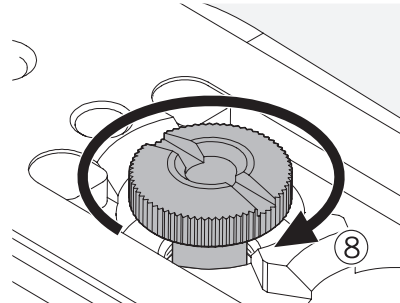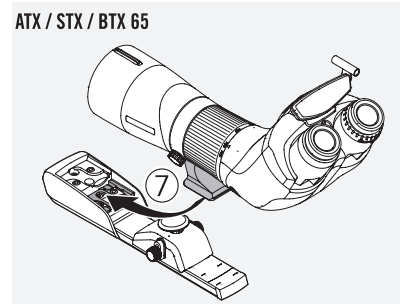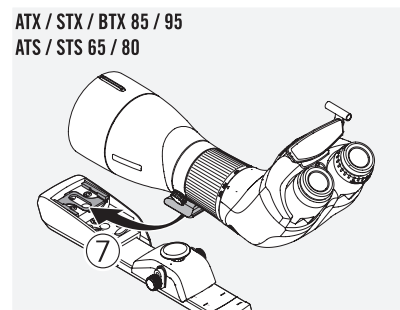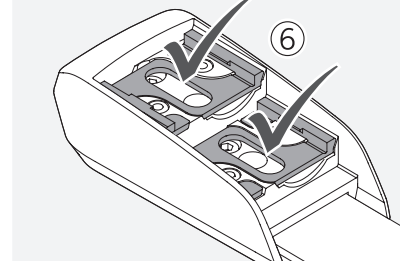    

STANDARD

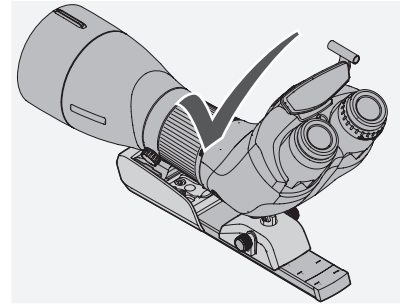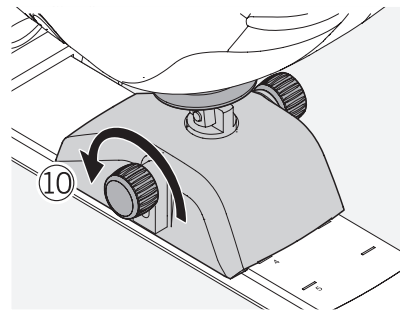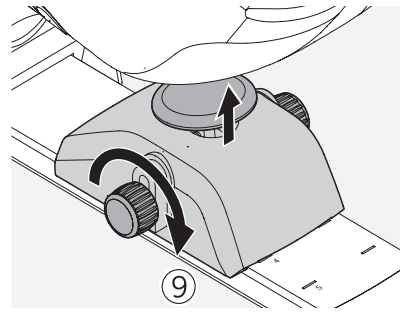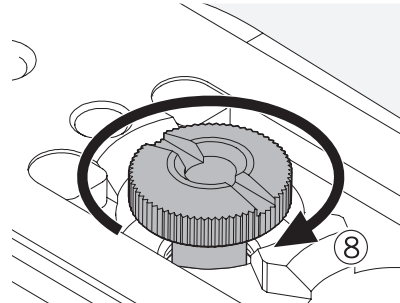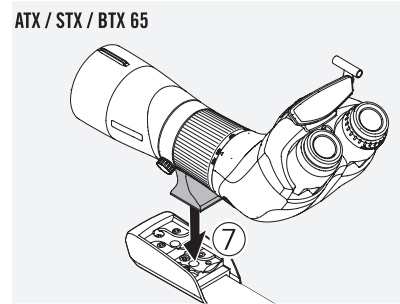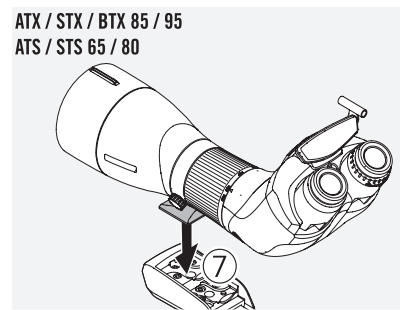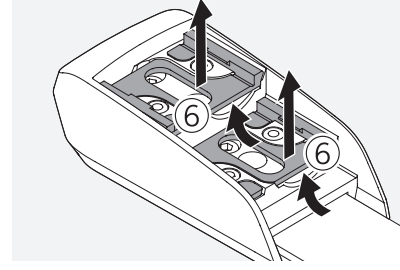       

BR + ME 1.7x

